


Model SMB500 Surface Mount Box

Notice: This manual should be left with the owner/user of this equipment.

1. If surface mount conduit is to be used, predrill a hole in the side of the surface mount box at one of the drill centers provided.
2. Secure the surface mount box to the wall with #6 screws and plastic anchors (provided) or to a junction box (screws not provided).
3. Wire the module according to the module instructions.
4. Assemble the module to the surface mount box with the #8 screws provided.
5. Fasten the cover plate to the module, using the screws provided with the module.

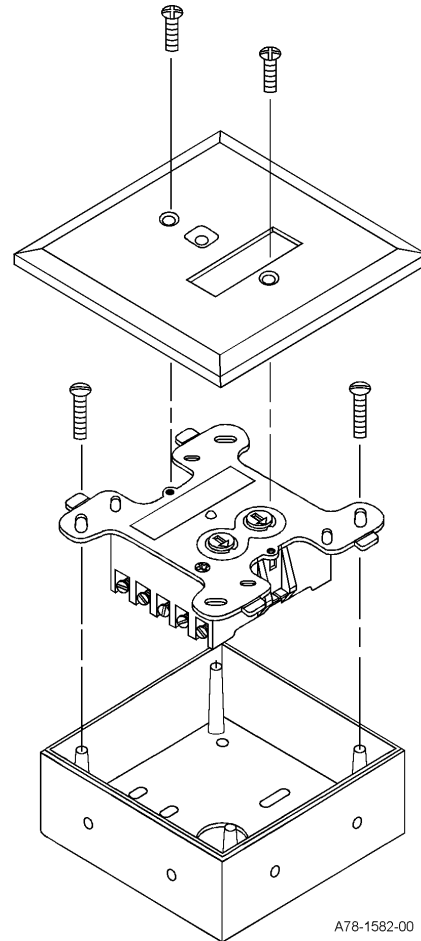

Three-Year Limited Warranty

System Sensor warrants its enclosed surface mount box to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor makes no other express warranty for this surface mount box. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company's obligation of this Warranty shall be limited to the repair or replacement of any part of the surface mount box which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor's toll free number 800-SENSOR2 (736-7672) for a Return Authorization number, send defective units postage prepaid to: System Sensor,

Repair Department, RA # _____, 3825 Ohio Avenue, St. Charles, IL 60174. Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to repair or replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company's negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.